

COATINGS MANUAL

Congratulations on choosing one of the GYEON high quality coatings. With this user manual we would like to share with you basic tips on surface preparation and application to ensure your complete safety during application and satisfaction with the end result.


Q² TRIM



Wash and degrease the rim surface with a strong degreasing agent



Ensure the surface is oil-free and completely dry. Use Q²M PREP before applying the coating

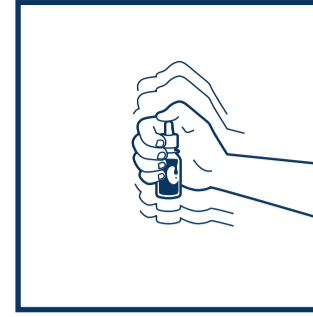

Shake the bottle of Q² TRIM before use.



Wipe Q² TRIM onto the surface in a criss-cross pattern. Ensure a thick layer has built up.

SURFACE PREPARATION:

Proper surface preparation is crucial for the bonding and durability of the installed coating. Always mind these simple rules:

- the surface should be decontaminated and free of any residue;
- old waxes, glazes or coatings should be stripped before proceeding



Wipe off if necessary shortly after application. Wipe off depends on climate (ask your supplier for advice).


TECH-FACTS AND APPLICATION TIPS:

Never work in direct sunlight. Ensure the area you work is well ventilated. Ensure the car stays in stable conditions without the risk of rainfall or rapid humidity changes after the coating application. Always respect individual product application instructions. The coating is fully dry after 24 hours. Only after that time the car can be driven.

PRECAUTIONS:

- Skin protection recommended.
- Work in a well-ventilated area.
- Store in a dark, dry and cool place.
- Keep out of reach of children.


Q² RIM

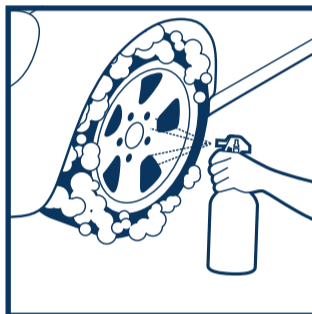


Wash the rim with a strong degreasing agent.



Always use Q²M IRON and Q²M TAR while cleaning the surface. If additional impurities are visible, you can remove them with Q²M CLAY. Use Q²M PREP before applying the coat (isopropyl alcohol does not fully degrease the surface).

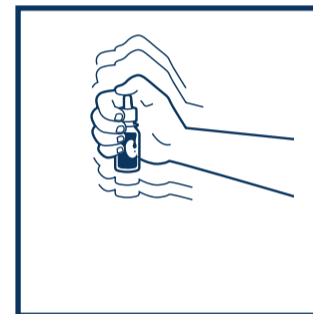

Shake the Q² RIM bottle well before use.

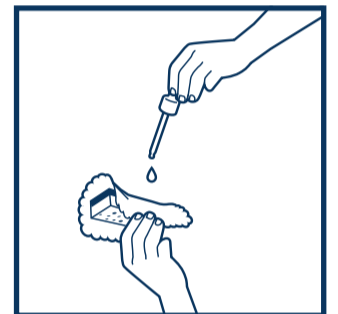

Apply a thick layer with the attached applicator.




Wipe off immediately after application (ask your supplier for advice). Split complex-shaped rims in sections.

Q² VIEW


Q² CLEANSE



Clean the window with Q²M GLASS.

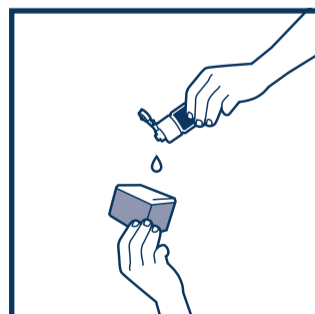


Use a soft, thick sponge to rub the product in a circular motion into the surface. Work on small areas, ensure precise cleaning.

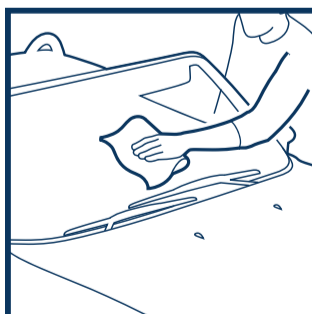


Wipe the residue of the product with a clean, damp cloth. Wait until the surface dries out completely and apply Q² REPEL.


Q² REPEL

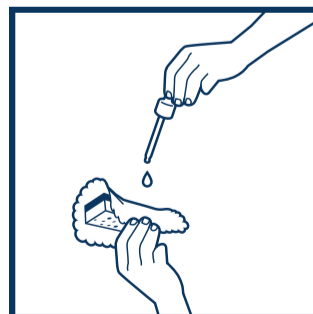

Always use Q² CLEANSE to prepare the surface. Apply Q² REPEL in circular motion generously in small section. Leave it to dry for 15min and apply a 2nd layer without wiping off the 1st layer. We recommend to use the whole 20 ml bottle for a windshield and 2 side windows.

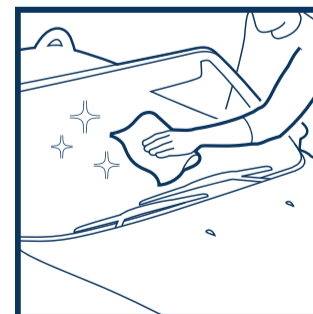


After 15min remove the residue with a damp Q²M BALDWIPE. Repeat if necessary.

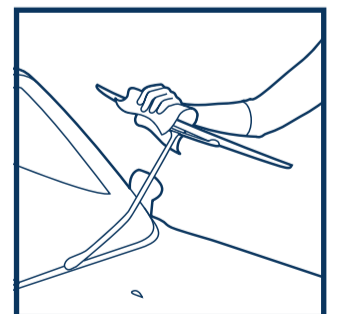

For maximum durability apply a small amount of the product onto your wiper blades or replace them with new ones. Avoid any water for at least a few hours.

Q² LEATHERSHIELD

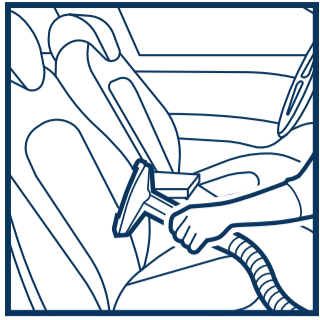


Vacuum the leather and ensure it is free of debris and dust.




Clean the leather with the use of Q²M LEATHERCLEANERS. Do not use cleaners containing any softening additives!




Wipe remainings of cleaners with a damp towel. Inspect the leather.

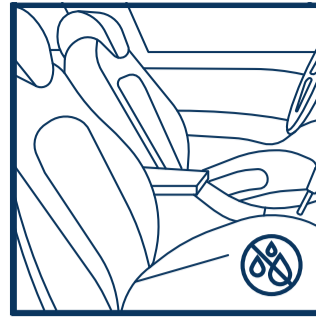

Make sure the surface is completely dry before starting the application of Q² LEATHERSHIELD.

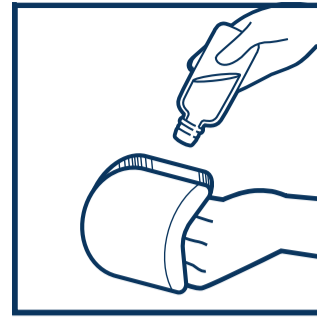

Use a generous amount of product on the included block applicator. You can also apply Q² LEATHERSHIELD with a Q²M MF Applicator for maximum efficiency.

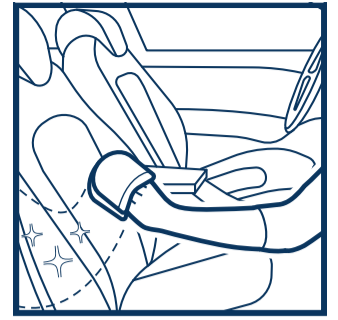

Ensure even application of product. Do one element at the time.



Let the product sit for 3-5min, inspect and remove any leftover with a Q²M BALDWIPE.




Let the product cure for a minimum of 6h before using the coated surface.




- Make sure you apply the product on modern automotive leather upholstery with closed structure.
- You may apply the product on high quality artificial leather.
- Do not apply on open structure, i.e. aniline or semi-aniline leather.
- Do not apply on vintage, worn or restored leather.
- Always apply first on a hardly visible test section. Check for discolouration or colour transfer before you move on.
- After application, we recommend to inspect the surface with an inspection lamp.
- If you see highspots/streaks within the first 15min, apply a bit more product to even them out and wipe off immediately.


Q² ANTIFOG

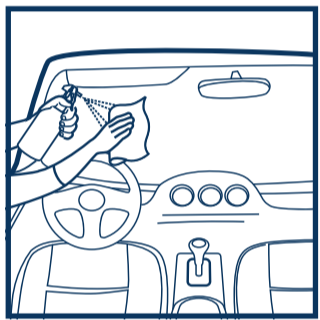


Ensure that the surface is well cleaned with Q²M GLASS. Use of Q²M PREP for further degreasing is recommended.

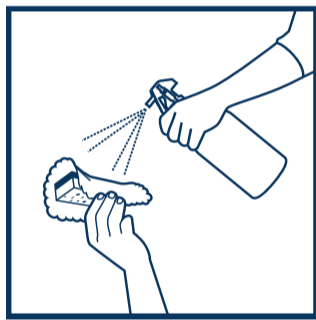

Apply a small amount of the product onto the surface using a suede applicator.

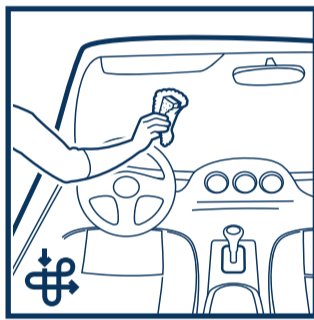


Always apply in a criss-cross motion until only a hardly visible haze remains.

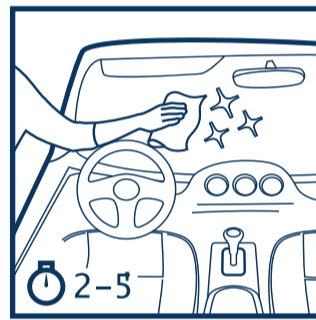


Wipe after 2-5 minutes with a soft microfibre.


Q² AERO

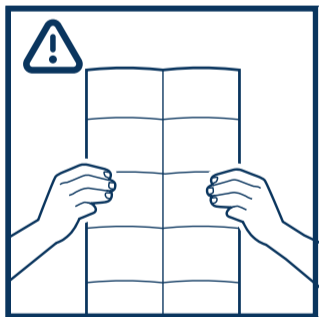

Read carefully all information in this manual, including the Tips&Tricks and Precautions sections.

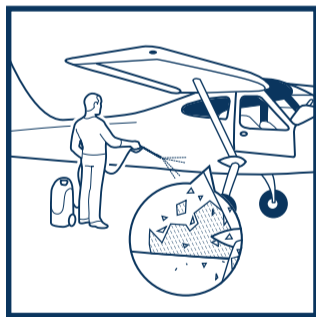


Wash the plane using Q²M FOAM and a strong degreasing agent.

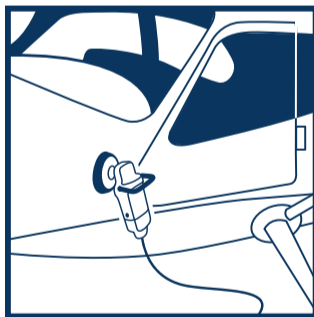

Ensure the surface is contaminants free. We recommend at least one step of paint correction to improve gloss and remove defects.



Always wash the plane with a highly degreasing agent after paint correction. Hot water and the use of a dish washing liquid are recommended.

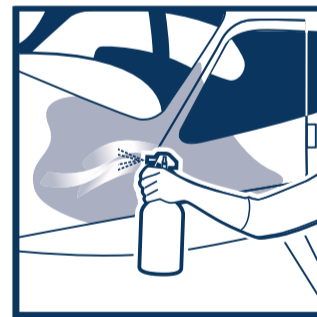

Ensure the surface is oil-free and completely dry. Use of Q²M PREP is obligatory.



Shake the Q² AERO bottle before use.



Use a generous amount of product on the Q²M COATING APPLICATOR. Ensure the surface is cool and completely dust free.



Apply a thick layer of Q² AERO. Level the coating well. Apply in your preferred motion. Levelling is crucial, not the application pattern. We recommend applying full panels. Split panels only while applying at high temperature or humidity.



Wipe off immediately (10 - 30 seconds) after applying to the whole panel/section. Inspect each panel for high spots immediately.

NOTES

Let the coating dry for 12h before using the aircraft.

Ensure the aircraft is stored in a dry place and will not be exposed to rain.

After this period, the plane can be used in all conditions.

Do not wash the aircraft with any strong detergents within the first 14 days.